 


Nexus

Tone Table

| TONE | TONE TYPE | TONE DESCRIPTION/ APPLICATION | DIP SWITCH 1_2_3_4_5 | 3 rd STAGE TONE |
|------|---|--|-------------------------|-------------------------------|
| 1. | ———— | 970Hz (BS5839-1:2002) | 0-0-0-0-0 | 18 |
| 2. | □□□□ | 800Hz/970Hz @ 2Hz (BS5839-1:2002) | 0-0-0-0-I | 1 |
| 3. | ∕∕∕∕ | 800Hz – 970Hz @ 1Hz (BS5839-1:2002) | 0-0-0-I-0 | 1 |
| 4. | ----- | 970Hz 1s OFF/1s ON (Apollo Fire Systems Alert Tone, BS5839-1:2002) | 0-0-0-I-I | 1 |
| 5. | □□□□ | 970Hz, 0.5s/ 630Hz, 0.5s (Apollo Fire Systems Evacuate Tone, BS5839-1:2002) | 0-0-I-0-0 | 1 |
| 6. | □□□ | 554Hz, 0.1s/ 440Hz, 0.4s (France – AFNOR NF S 32 001) | 0-0-I-0-I | 1 |
| 7. | ∕∕∕ | 500 – 1200Hz, 3.5s/ 0.5s OFF (Netherlands – NEN 2575:2000) | 0-0-I-I-0 | 1 |
| 8. | ----- | 420Hz 0.625s ON/0.625s OFF (Australia AS1670 Alert tone) | 0-0-I-I-I | 1 |
| 9. | ∕∕∕ | 500 – 1200Hz, 0.5s/ 0.5s OFF x 3/1.5s OFF (Australia AS1670 Evacuation tone) | 0-I-0-0-0 | 1 |
| 10. | □□□□ | 550Hz/440Hz @ 0.5Hz | 0-I-0-0-I | 19 |
| 11. | --- --- | 970Hz, 0.5s ON/0.5s OFF x 3/ 1.5s OFF (ISO 8201 Low tone) | 0-I-0-I-0 | 1 |
| 12. | --- --- | 2850Hz, 0.5s ON/0.5s OFF x 3/1.5s OFF (ISO 8201 High tone) | 0-I-0-I-I | 1 |
| 13. | □□□□ | 1200Hz – 500Hz @ 1Hz (DIN 33 404) | 0-I-I-0-0 | 1 |
| 14. | ———— | 400Hz | 0-I-I-0-I | 18 |
| 15. | □□□□ | 550Hz, 0.7s/1000Hz, 0.33s | 0-I-I-I-0 | 1 |
| 16. | ∕∕∕∕ | 1500Hz – 2700Hz @ 3Hz (Vandal Alarm) | 0-I-I-I-I | 1 |
| 17. |  | Simulated Bell | I-0-0-0-0 | 1 |
| 18. | ———— | 2400Hz | I-0-0-0-I | 1 |
| 19. | ———— | 660Hz | I-0-0-I-0 | 10 |
| 20. | ----- | 660Hz 1.8s ON/1.8s OFF | I-0-0-I-I | 19 |
| 21. | ----- | 660Hz 0.15s ON/0.15s OFF | I-0-I-0-0 | 19 |
| 22. | □□□□ | 510Hz, 0.25s/ 610Hz, 0.25s | I-0-I-0-I | 1 |
| 23. | □□□□ | 800/1000Hz 0.5s each (1Hz) | I-0-I-I-0 | 1 |
| 24. | ∕∕∕∕ | 250Hz – 1200Hz @ 12Hz | I-0-I-I-I | 1 |
| 25. | ∕∕∕∕ | 500Hz – 1200Hz @ 0.33Hz. | I-I-0-0-0 | 1 |
| 26. | ∕∕∕∕ | 2400Hz – 2900Hz @ 9Hz | I-I-0-0-I | 1 |
| 27. | ∕∕∕∕ | 2400Hz – 2900Hz @ 3Hz | I-I-0-I-0 | 1 |
| 28. | ∕∕∕∕ | 800Hz – 970Hz @ 100Hz | I-I-0-I-I | 1 |
| 29. | ∕∕∕∕ | 800Hz – 970Hz @ 9Hz | I-I-I-0-0 | 1 |
| 30. | ∕∕∕∕ | 800Hz – 970Hz @ 3Hz | I-I-I-0-I | 1 |
| 31. | - - | 800Hz, 0.25s ON/1s OFF | I-I-I-I-0 | 1 |
| 32. | ∕∕∕ | 500Hz – 1200Hz, 3.75s/0.25s OFF | I-I-I-I-I | 1 |
| 33. | ———— | 340Hz | 0-0-0-0-0 | 1 |
| 34. | ———— | 1000Hz | 0-0-0-0-I | 18 |
| 35. | ∕∕∕∕ | 1400Hz – 1600Hz, 1s/1600Hz – 1400Hz, 0.5s (NF 48-265) | 0-0-0-I-0 | 1 |
| 36. | ----- | 660Hz 6.5s ON/13s OFF | 0-0-0-I-I | 19 |
| 37. | □□□□ | 1000Hz/2000Hz, 1s each | 0-0-I-0-0 | 1 |
| 38. | ----- | 720Hz, 0.7s ON/0.3s OFF | 0-0-I-0-I | 1 |
| 39. | ----- | 970Hz, 0.25s ON/OFF | 0-0-I-I-0 | 1 |
| 40. | ----- | 2800Hz, 1s ON/OFF | 0-0-I-I-I | 1 |
| 41. | ----- | 2800Hz 0.25s ON/OFF | 0-I-0-0-0 | 1 |
| 42. | □□□□ | 2400/2900 @ 2Hz | 0-I-0-0-I | 1 |
| 43. | | Chime, 554Hz/440Hz Single shot 'ding dong' | 0-I-0-I-0 | 1 |
| 44. | | Chime, 554Hz/440Hz Repeating 'ding dong' | 0-I-0-I-I | 1 |
| 45. | | Chime, 970Hz/800Hz Single shot 'ding dong' | 0-I-I-0-0 | 1 |
| 46. | | Chime, 970Hz/800Hz Repeating 'ding dong' | 0-I-I-0-I | 1 |
| 47. | | Hooter, Repeating | 0-I-I-I-0 | 1 |
| 48. | □□□□ | Gentle alarm - Tone 2, rises slowly to full volume over 30s | 0-I-I-I-I | 1 |
| 49. | □□□□ | Time-Out Alarm - Tone 2, cuts off after 10 mins | I-0-0-0-0 | 1 |
| 50. | □□□□ | Time-Out Alarm - Tone 2, cuts off after 2 mins | I-0-0-0-I | 1 |
| 51. | ----- | 750Hz 0.33s ON/0.51s OFF | I-0-0-I-0 | 1 |
| 52. | ----- | 750Hz 0.51s ON/0.33s OFF | I-0-0-I-I | 1 |
| 53. | ----- | 550Hz, 0.33s/1000Hz, 0.7s | I-0-I-0-0 | 1 |
| 54. | ∕∕∕∕ | 600Hz – 900Hz/ 0.9s | I-0-I-0-I | 1 |
| 55. | ∕∕∕∕ | 660Hz – 680Hz/ 0.9s | I-0-I-I-0 | 1 |
| 56. | ∕∕∕∕ | 670Hz – 725Hz/ 0.9s | I-0-I-I-I | 1 |
| 57. | ∕∕∕∕ | 920Hz – 750Hz/ 0.9s | I-I-0-0-0 | 1 |
| 58. | ∕∕∕ | 700Hz - 900Hz, 0.3s/0.6s OFF | I-I-0-0-I | 1 |
| 59. | □□□ | 900Hz - 760Hz, 0.6s/0.3s OFF | I-I-0-I-0 | 1 |
| 60. | ———— | 750Hz | I-I-0-I-I | 18 |
| 61. | | Power Only – Use with Stage 3 control for manual/intermittent chime triggering | I-I-I-0-0 | 43 |
| 62. | | Power Only – Use with Stage 3 control for manual/intermittent chime triggering | I-I-I-0-I | 43 |
| 63. | | Power Only – Use with Stage 3 control for manual/intermittent horn triggering | I-I-I-I-0 | 47 |
| 64. | | Reserved for future use | I-I-I-I-I | |