





Sonos Basic Wiring Diagrams

1. 9-60V DC Sounder-Only

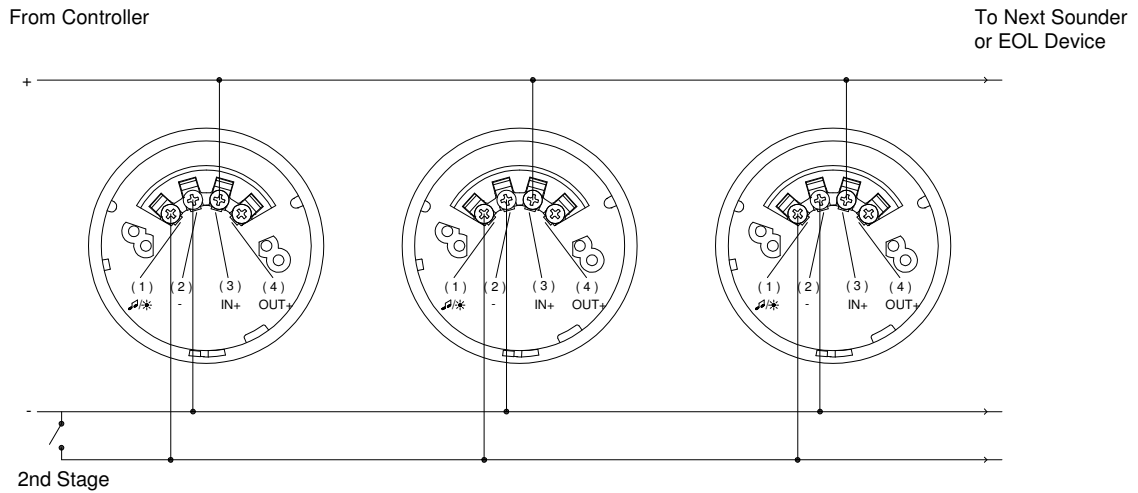

2. 17-60V DC Sounder-Beacon

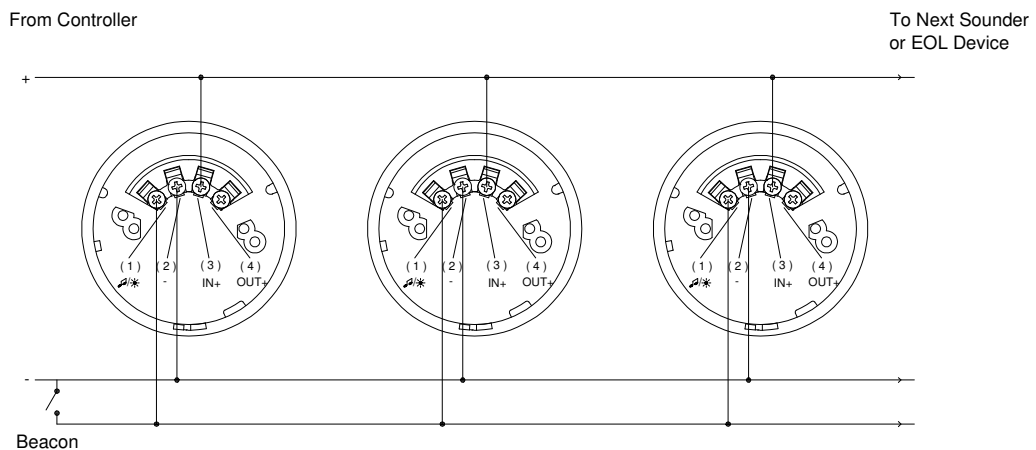

3. 17-60V DC Beacon-Only

From Controller

To Next Beacon
or EOL Device

