

inferno intenso

INSTALLATION INSTRUCTIONS


The Inferno Sound Barrier is intended for professional use only and should be handled and installed by authorized installers.

- Do not connect the unit to other supplies than 12 (12-16) V DC.
- It will not work properly before the unit has been charged for 6 hours.
- The battery must be changed every third year.
- While dealing with the PCB's inside the unit, precautions must be observed for handling electrostatic discharge sensitive devices.
- It's recommended to use earplugs when installing

Tools needed:

- Screwdriver
- Torx wrench
- Screws and drill for mounting the unit

QUICK INSTALLATION

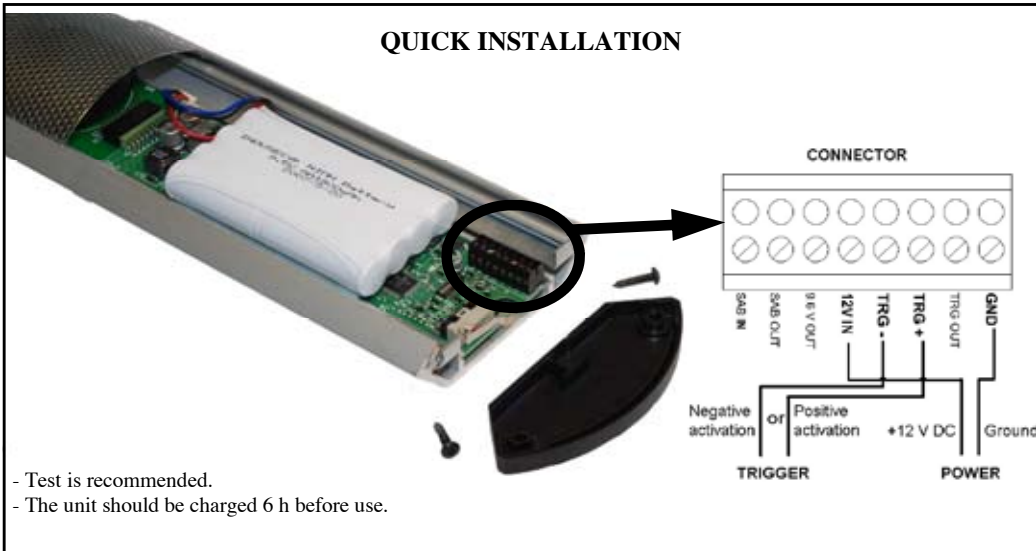


1



Indusec makes no representation that this product will prevent personal injury or property loss or that the product will in all cases provide adequate warning or protection. Purchaser should understand that a properly installed and maintained alarm system may only reduce the risk of a burglary, robbery or fire without warning, but the alarm is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. THEREFORE, INDUSEC, SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES IN CONNECTION WITH THE USE, INSTALLATION AND/OR MAINTENANCE OF THE PRODUCT. Including, but not limited to the liability for any property damage, bodily injury, or other loss based on a claim that the product failed to give warning, or any cost of expense of providing substitute equipment or service during periods of malfunction, nonuse or maintenance. In no event shall the liability of Indusec exceed the purchase price of the product.

klaxon

1) THE UNIT

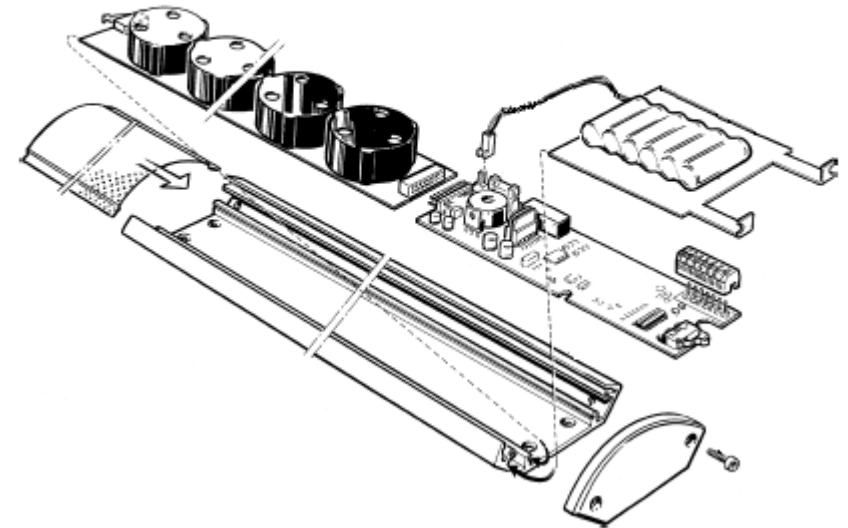

2) MOUNTING

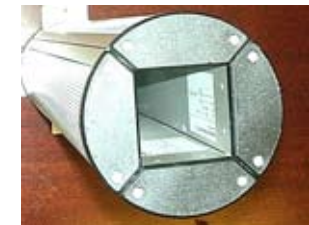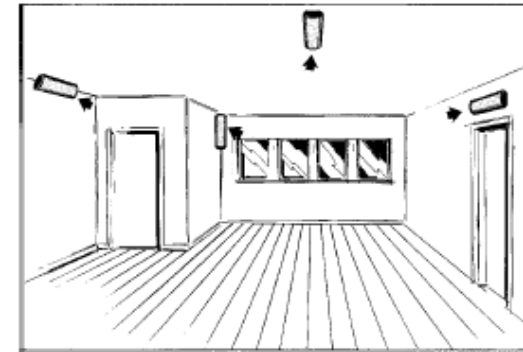


Option: Multiple units


Multiple units can be attached together forming either a semi circle or a full circle. The Semi-circle unit can be mounted either on the wall or the ceiling while the Omni version works best hanging from the ceiling.

2

3) CONNECTION AND SETUP

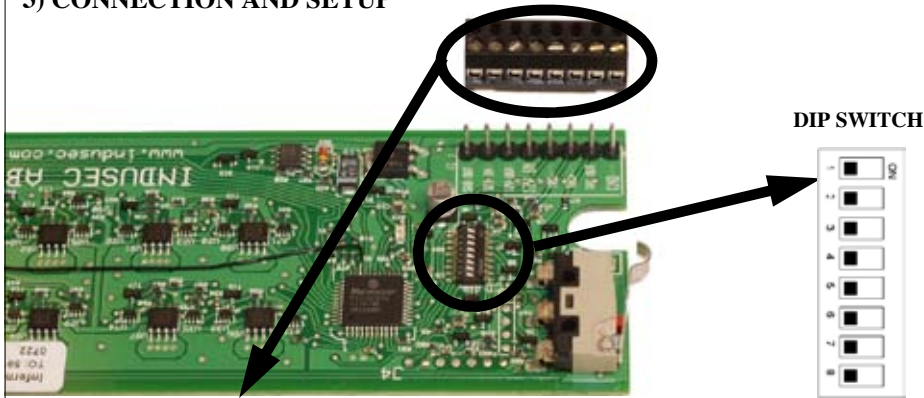

CONNECTOR

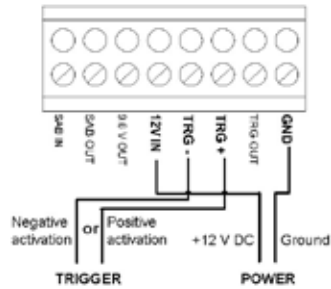

GND = Ground
 TRG OUT = Bad battery signal, see below
 TRG + = Positive activation
 TRG - = Negative activation
 12 V IN = Charge +12 V DC
 9.6 V OUT = Reserve
 SAB OUT = Tamper out
 SAB IN = Tamper in


Bad battery signal

- Dip switch: 8 ON
- Connector: pin 7 and 8 (TRG OUT and GND)

DIP SWITCH



1. Charging Indication
 ON = A red light will lit when charging.
 OFF = No indication when charging. (default)
2. Delay between received trigger signal and the alarm sounding.
 ON = 30 s
 OFF = 0 s (default)
3. Test Mode
 ON = Test mode, four short different-pitched sound signals.
 OFF = Normal mode (default)
4. Alarm Signal Length
 ON = Infinite alarm
 OFF = 3 min, after a new trig is needed (default)
5. Reserve
6. Fixed Alarm Signal Length
 ON = 45 s
 OFF = Normal mode (default)
7. Sound level
 ON = 127 ± 1 dB(A) @ 1m. 20 s and then 124 ± 1 dB(A) @ 1m. NOTE! Very high sound level.
 OFF = 125 ± 1 dB(A) @ 1m (default)
8. Automatic Battery Check
 ON = Bad battery signal on pin 7 on Connector, see below
 OFF = Led flash => Bad battery (default)

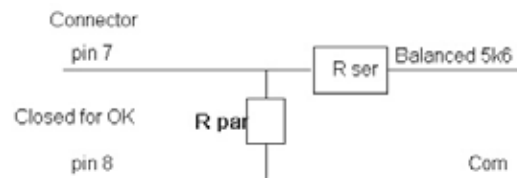

3

Option: Tamper

The tamper loop is an extra mechanical security protection. It is not needed for the function of the siren.

The tamper loop consists of a series connection that enters at the Connector at SAB IN goes through the microswitch at the end of the board, runs through the CPU board through the middle connector to the speaker board through the microswitch on that very end and back to the Connector at SAB OUT.

The loop can contain other normally-closed switches such as magnetic contacts or mercury tilt switches in the alarm set-up.

4) ASSEMBLING THE UNIT

1. Before applying power to the unit, ensure that Dip switch 3 is in the ON position = Test mode.
2. Assemble the two PCB's and the battery. Attach the battery cable to the connector.
3. Power can now be applied.
4. Set Dip switch 1 to ON. A red LED on the CPU circuit board should light up.
5. Dip switch 1 can be in either in ON or OFF mode.
6. Set the Dip switch 3 to OFF = Normal mode. Attach the grid and the two end caps.
7. The Inferno is assembled and ready for use.

5) TEST

We recommend testing the unit either before mounting or during assembling.

Without a connected Tamper loop it is only necessary to connect the two PCB's, the battery and power.

Test procedure (The battery will need about 20 minutes to charge before testing.):

1. Set Dip switch 3 to ON position.
2. Activate either Trigger signal.
3. The unit should generate four short different-pitched sound signals indicating that the unit works.
4. Switch off the Trigger signal.
5. Set Dip switch 3 to OFF position. (Normal operation mode)
6. The test is complete.

6) SPECIFICATIONS

Coverage

Up to 150 cubic meters (60 square meters x 2.5)

Electrical interface

Power Supply
 Activation Signals

12 – 16 V DC, < 150 mA
 Trig (-): 0 – 0.5 V, (10 mA)
 Trig (+): 9 – 18 V, (10 mA)

Cables

0.25 – 1.0 square mm, (AWG 22 – 18)

Battery

Capacity
 Charge time
 Standby w/o battery charge
 Life time

9.6 V Ni-MH, NI-MH batteries performance is improved if charged/discharged.
 1800 mAh, (sufficient for 30 minutes continuous alarm)
 The unit should be charged 6 hours before use.
 1 month
 3 years, then it has to be replaced

Sound output

125-127 ± 1 dB(A) @ 1m, user selectable

Output frequency

2–5 kHz

4

